 


ACE


Gearmotor for swing gates



Index

1.	SAFETY INSTRUCTIONS	pag. 01
	COMPLIANCE DECLARATION	pag. 01
2.	DESCRIPTION AND INTENDED USE	pag. 01
2.1	Technical data	pag. 02
2.2	Kit content	pag. 02
2.3	Dimensions	pag. 02
3.	INSTALLATION	pag. 03
3.1	Preliminary checks	pag. 03
3.2	Wiring	pag. 03
	3.2.1 Standard installation	
	3.2.2 Cable types and minimum thicknesses	
3.3	Establishing RH and LH operator	pag. 04
3.4	Fastening the gearmotor	pag. 04
	3.4.1 Vertical positioning quota	
	3.4.2 Horizontal positioning quota	
	3.4.3 Outward opening	pag. 06
3.5	Fastening rear bracket T3	pag. 06
3.6	Fastening front bracket S3	pag. 06
4.	RELEASING THE GEARMOTOR	pag. 07
5.	MAINTENANCE	pag. 07
6.	DISMANTLING AND DISPOSAL	pag. 07

1. SAFETY INSTRUCTIONS

Warning: Important safety instructions for people, READ CAREFULLY when you see this symbol: 
 This product must only be used for its intended purpose. Any other use is dangerous.
 Follow all instructions as improper installation may result in serious bodily injury.
 Keep these warnings together with the installation and operation manuals that come with the gearmotor.



Always cut off the power supply before performing any type of intervention.



Always make sure the gearmotor is properly connected to the earth

Use and installation of the product must comply with Machinery Directive 2006/42/CE.
 Verify that the system is EN 124445 and EN 12453 standard compliant.

Installation must be carried out by expert qualified personnel who knows the potential hazards associated and in full compliance with current regulations.

Use of the product must be restricted to its intended use. Any other use is to be considered dangerous and therefore forbidden.



Do not allow children to play with the fixed command devices, or in the gate's area of operation.
Keep any remote control devices (i.e. transmitters) away from children,
to prevent the gearmotor from being accidentally activated

Keep the gate and the gate opener regularly maintained. Use only Proteco's original spares.

Users are strictly forbidden to carry out any changes on the gate operator.

Proteco Cancelli Automatici Srl is not liable for any damage resulting from improper, wrongful or unreasonable use.

CE COMPLIANCE DECLARATION

Manufacturer: PROTECO S.r.l.
Address: Via Neive, 77 - 12050 Castagnito (CN) - ITALIA
declares that
The product type: ACE electromechanical gear motor for swing gates
Models: ACE 3 TI, ACE 4 TI, ACE 4 REV, ACE 3 24 TI, ACE 4 24 TI
 ACE 4 TA, ACE 4 24 -TA

Is built to be integrated into a machine or to be assembled with other machinery to create a machine under provisions of 2006/42/EC Machinery Directive, with reference in particular to the following requirements: 1.1.2 1.1.3 1.1.5 1.2.1 1.2.2 1.2.3 1.2.6 1.3.2 1.3.4 1.3.9 1.4.1 1.4.2.1 1.5.1 1.5.4 1.5.6 1.5.8 1.5.13 1.6.1 1.6.4 1.7.1 1.7.3 1.7.4

It complies with the essential requirements of EEC Directives:

2004/108/CE (electromagnetic compatibility)
2011/65/CE (directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment)

It complies with the essential requirements of EEC Directives:

EN 12453 Industrial, commercial and garage doors and gates. Safety in use of power operated doors. Requirements
EN 60335-1 Safety of household and similar electrical appliances - Part 1: General requirements
EN 60335-2-103 Household and similar electrical appliances - Part 2-103: Particular requirements for drives for gates, doors and windows.

The manufacturer also declares that the start-up of the machinery is not permitted unless the machine, in which the product is incorporated or of which is becoming a component, has been identified and declared as conformed to 2006/42/EC Machinery Directive.

Castagnito, 3 October 2016

rd

Marco Gallo
 CEO

2. PRODUCT DESCRIPTION AND INTENDED USE

ACE gear motors are designed to automate residential or commercial swing gates with one or two wings.

Any other use than above described has to be considered as inappropriate and strictly prohibited.

All models feature an irreversible gearing system that locks the gate when it is in its fully closed position.
 Therefore no additional lock is needed.

In case of a power failure the motor lock can be released to move the gate manually (from inside).


The 24V versions can also be powered by a back-up battery system that allows emergency openings even in case of a power cut.

ACE TI


	Ace 3 TI	Ace 4 TI	Ace 4 REV	Ace 3 TI 24	Ace 4 TI 24	Ace 3 TI 115	Ace 4 TI 115
Motor power supply	230V ~ 50Hz	230V ~ 50Hz	230V ~ 50Hz	24V dc	24V dc	115V ~ 60Hz	115V ~ 60Hz
Max draw.	1,2 - 1,7A	1,2 - 1,7A	1,2 - 1,7A	0,5 - 0,75A	0,5 - 0,75A	3,1 - 3,3A	3,1 - 3,3A
Power	300W	300W	250W	50W	50W	300W	300W
Capacitor	10µF	10µF	8µF	—	—	20µF	20µF
Thermal protection	150°C	150°C	150°C	—	—	150°C	150°C
Adjustable thrust	3000 N	3000 N	2500 N	2500 N	2500 N	3000 N	3000 N
Protection rating	44	44	44	44	44	44	44
Revolutions	1400 rpm	1400 rpm	900 rpm	1600 rpm	1600 rpm	1700 rpm	1700 rpm
Opening angle	120° deg	120° deg	120° deg	120° deg	120° deg	120° deg	120° deg
Opening time (90°)	17"	22"	22"	15"	20"	15"	18"
Leaf weight	350 Kg	400 Kg	350 kg	250 Kg	300 Kg	350 Kg	400 kg
Leaf length	2,0 m	3,0 m	3,0 m	2,0 m	3,0 m	2,0 m	3,0 m
Duty cycle	40%	40%	40%	80%	80%	40%	40%

ACE TA



	Ace 4 TA	Ace 4 TA 24	Ace 4 TA 115
Motor power supply	230V ~ 50Hz	24V dc	115V ~ 60Hz
Max draw.	1,2 - 1,7A	0,5 - 0,75A	3,1 - 3,3A
Power	300W	50W	300W
Capacitor	10µF	—	20µF
Thermal protection	150°C	—	150°C
Adjustable thrust	3000 N	2500 N	3000 N
Protection rating	44	44	44
Revolutions	1400 rpm	1600 rpm	1700 rpm
Opening angle	110° deg	110° deg	110° deg
Opening time (90°)	22"	20"	18"
Leaf weight	350 Kg	200 Kg	350 Kg
Leaf length	2,5 m	2,5 m	2,5 m
Duty cycle	40%	80%	40%

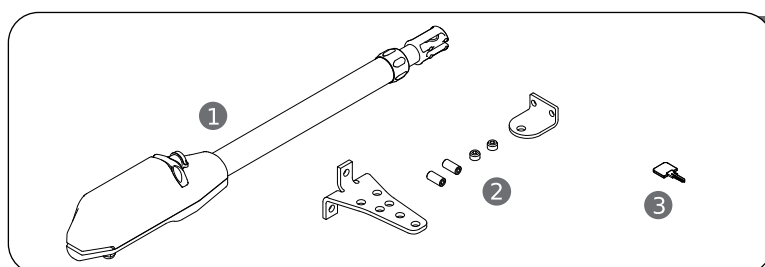2.2 KIT CONTENT**ACE TI**

1	ACE TI motor
2	SSAB15 Fittings bag T3 , includes:
	MPI10Z T3 pillar bracket
	MGR1410Z 14x10 grub screw
	MPE1226 12X16 stud
	SPIA0270 S3 gate bracket
3	MCH08 Release key

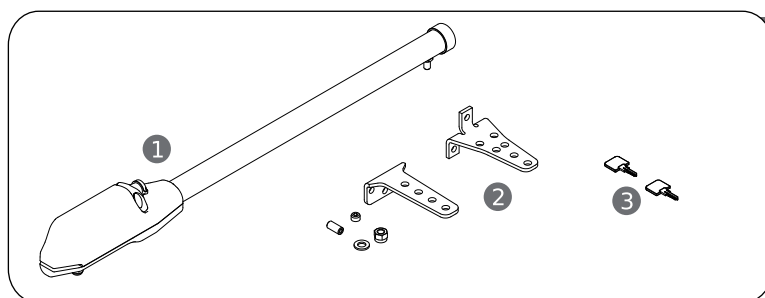**ACE TA**

1	ACE TA motor
2	SSAB17 Fittings bag TA , includes:
	MPI10Z T3 pillar bracket
	MGR1410Z 14x10 grub screw
	MPE1226 12X16 stud
	MRO12Z Ø12 washer
	MDAM12AB M12 self-locking nut
	SPIP0970 T2 gate bracket
3	MCH08 Release key

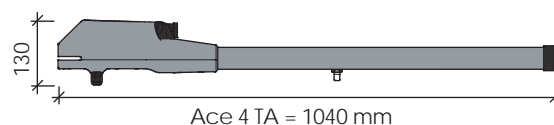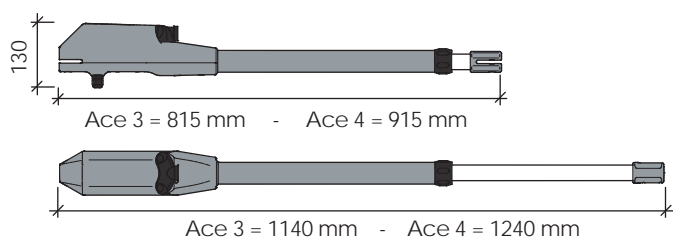2.3 DIMENSIONS

3. INSTALLATION

3.1 Preliminary checks


Before installing make sure:

- The gate conditions are suitable to automate.
- Weight, dimensions and gate construction are proper for the operator you intend to buy.
- You have suitable mechanical ground stops.
- The automated parts are in good mechanical conditions.
- The opening of the automated gate is not an entrapment hazard as regards any surrounding fixed parts and there is sufficient space for manual release.
- Any lawn watering devices will not wet the gearmotor from the bottom up.
- The earth cable is properly connected.
- Do not install onto gates on either an upward or downward slope (i.e. that are not on flat, level ground).

3.2 Wiring

3.2.1 Standard installation

Fig. 1

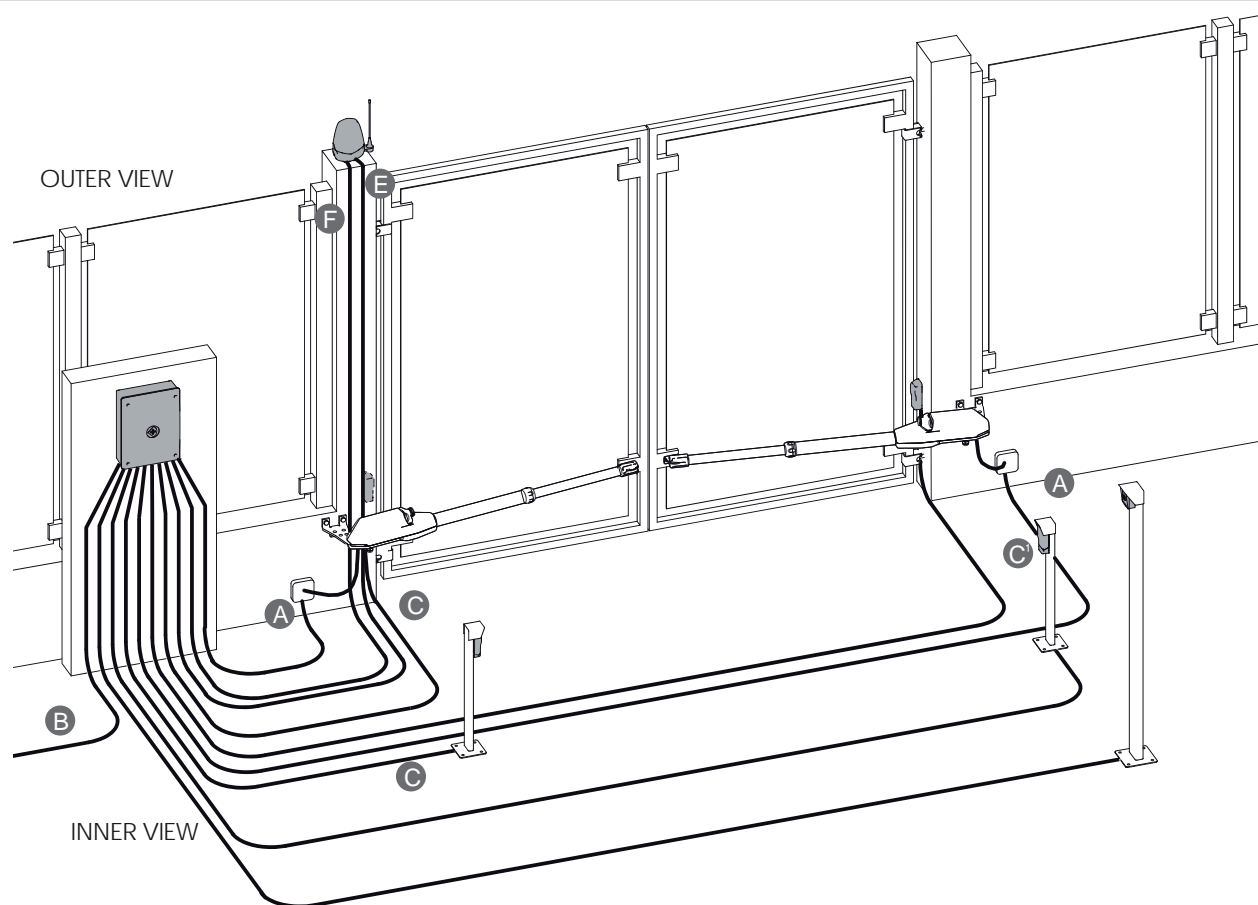

3.2.2 CABLE TYPES AND MINIMUM THICKNESSES

The quantities of tubes and cables needed (not included in the kit) depend on the type and number of accessories connected to the gate area.

	230V	24V
A operator	3x1,5 Earth	2x1,5
B Control panel	2x1,5 + Earth	2x1,5 + Earth
C Photocell receiver	rx 4x0,75	rx 4x0,75
C' Photocell transmitter	tx 2x0,75	tx 2x0,75
D Key switch	2x0,75	2x0,75
E Aerial	RG58	RG58
F Blinker	2x0,75	2x0,75

- Cut off the power before starting wiring.
- Make sure you have set up a suitable dual-pole cut off device (3 mm wires) along the power supply.
- Make sure you have suitable tubing and conduits for the electrical cables: connect the motors, control panel and accessories using separated corrugated tubes, in order to prevent interferences that may result in bad operation.
- Fit the power cable keeping a curve as shown in picture 2, in order to avoid water backflow inside the operator.
- All opening commands and safety devices must be free of tension (dry contact).

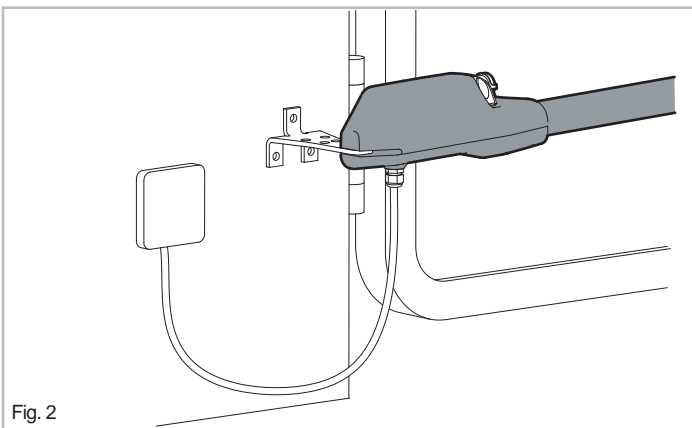


Fig. 2

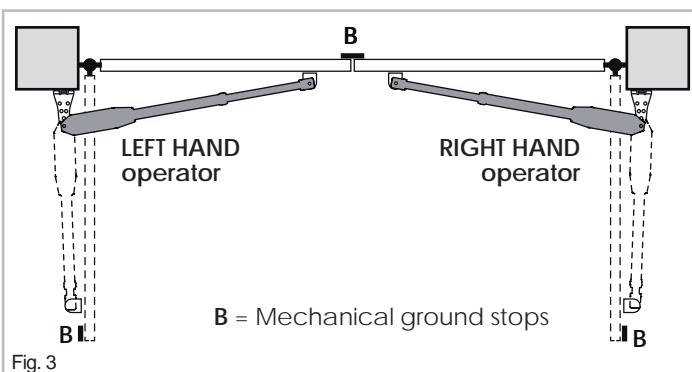


Fig. 3

3.3 ESTABLISHING RH AND LH OPERATOR

The ram operators are supplied handless version, it means they can be installed either on the right or left side of the gate (see picture 3).

ACE TI

Gate in closing position - inox pipe maximum extension:

Ace 3 = 345 mm

Ace 4 = 445 mm

Gate in opening position - inox pipe minimum extension 50 mm (see picture 4).

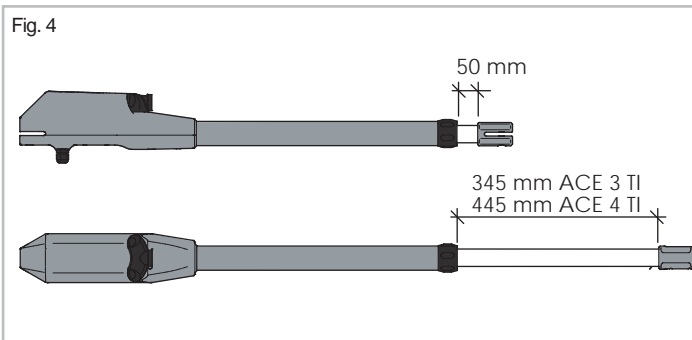


Fig. 4

ACE TA

Gate in closing position: minimum distance 50 mm.

Gate in opening position: maximum distance 450 mm. (see picture 5)

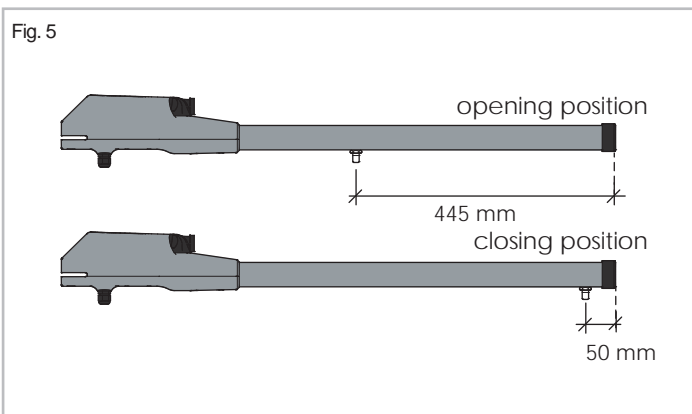


Fig. 5

3.4 FASTENING THE GEARMOTOR

3.4.1 Vertical positioning quota

- If the gate is sturdy you can fit the gearmotor wherever it goes, at any height from ground.
- If the gate is particularly light fit the gearmotor as close as possible to gate centerline.

3.4.2 Horizontal positioning quota

Gate leaf hinged in the center of the pillar (see picture 6).
Gate leaf hinged on the corner of the pillar (see picture 7).
 Best of performance is obtained respecting **A** and **B** dimensions, see picture 8 (opening angle 90°).

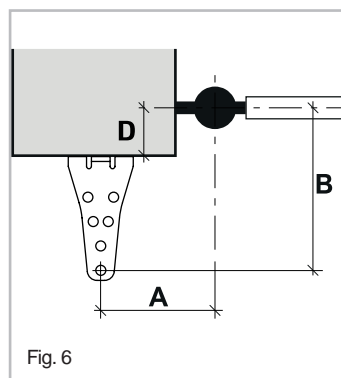


Fig. 6


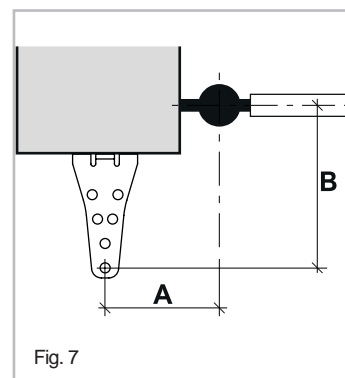


Fig. 7

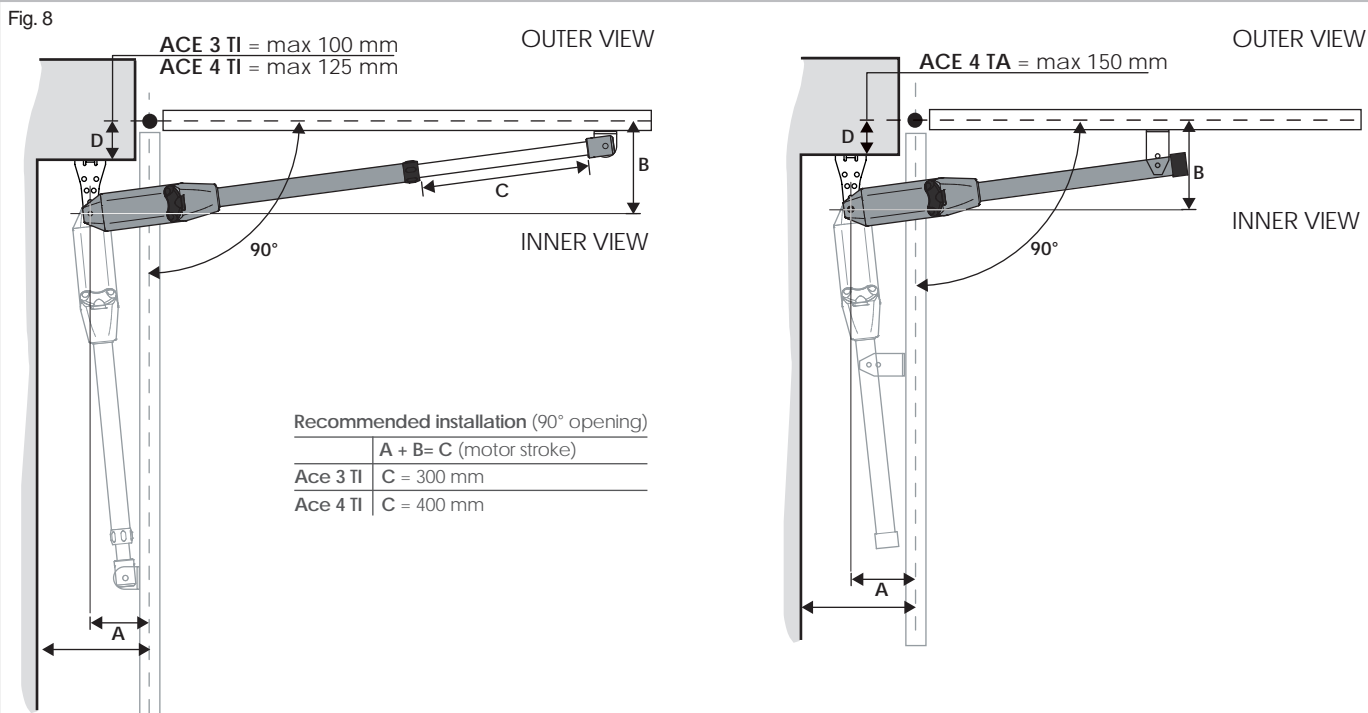

If the ideal scenario of **A** and **B** is not applicable, refer to the below table to determine the brackets position (values are expressed in **mm**).

Tab. 1

ACE 3 TI					
D	100	75	50	25	0
A	120	145	140	135	160
B	180	155	160	165	140
Rear bracket	80	80	80	80	110
Minimum leaf length	990	990	1000	1000	980

ACE 4 TI						
D	125	100	75	50	25	0
A	195	160	185	210	235	260
B	205	240	215	190	165	140
Rear bracket	80	80	110	140	140	140
Minimum leaf length	1140	1170	1150	1130	1100	1080

ACE 4 TA							
D	150	125	100	75	50	25	0
A	170	195	160	185	210	235	260
B	230	205	240	215	190	165	165
Rear bracket	80	80	80	80	140	140	140
Minimum leaf length	860	840	870	840	820	800	800

3.4.3 OUTWARD OPENING

Your gate can be automated for opening outwards too. In this case the value of **A** dimension shall be calculated towards the gate center. See picture 9 and 10 and fit the bracket accordingly.

ATTENTION!

A and B however will remain the same applied for inward opening.



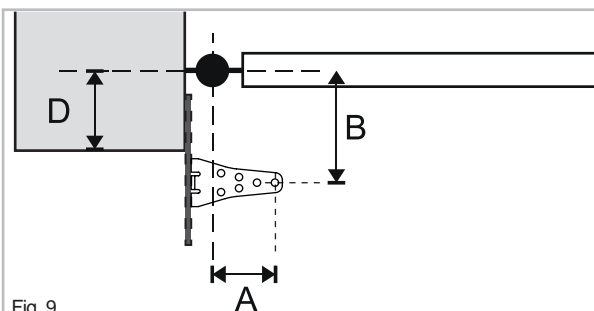


Fig. 9

Fig. 10

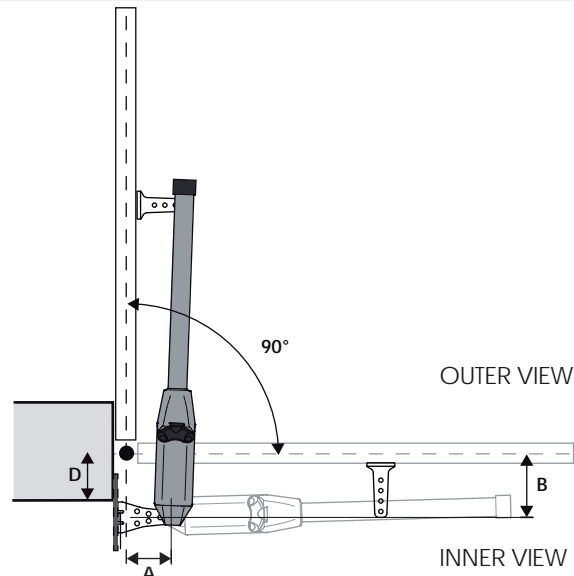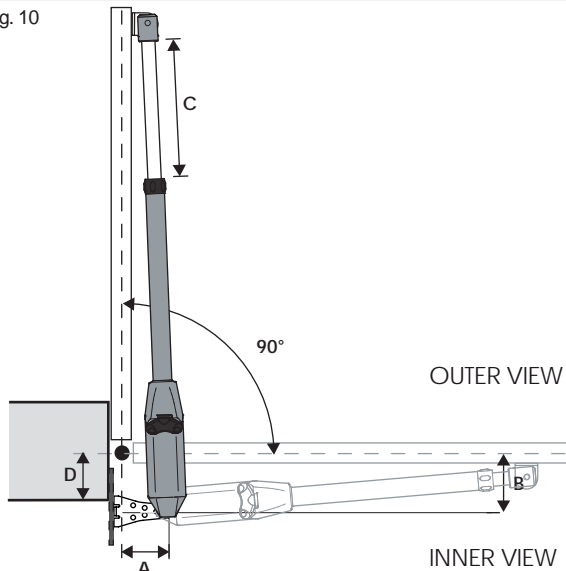

3.5 FASTENING REAR BRACKET T3

Weld or bolt the rear **bracket T3** on the post, applying the **A** and **B** quota calculated according to the gate hinge position and the motor rotation point. Chemical bolts can be used and must comply with the post features (brick, wood, steel, etc. etc.).

When fixing keep a minimum distance of 30/35 mm from the post edge in order to avoid damages (see picture 11).

- In order to properly cut the bracket start 15 mm from the hole center, as shown in the picture. 12.
- When fixing the operator to the rear **bracket T3**, plug **PR1** rotation pin downward oriented (see picture 13).

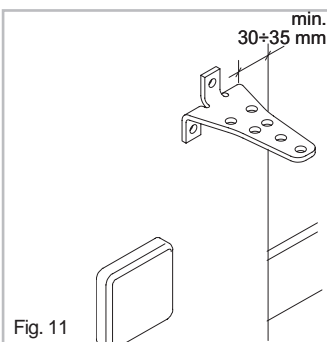


Fig. 11

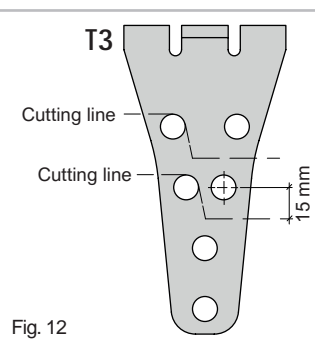


Fig. 12

3.6 FASTENING FRONT BRACKET S3

3.6.1 ACE TI

To determine the position of **bracket S3**:

- Put the gate in closing position.
 - Release the gearmotor.
 - Extend the inox pipe arm fully.
 - Turn back the arm 2 cm.
- This avoids the motor to "leap forward" (see picture 14)
- Affix the **bracket S3** to the motor slot.
 - Plug the rotation pin **PR1** into the locating hole.
 - Fit the **bracket S3** on the gate.
 - Keep the motor horizontal, fix or weld.

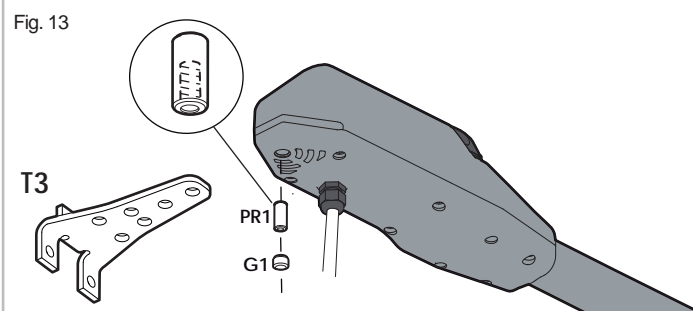


Fig. 13

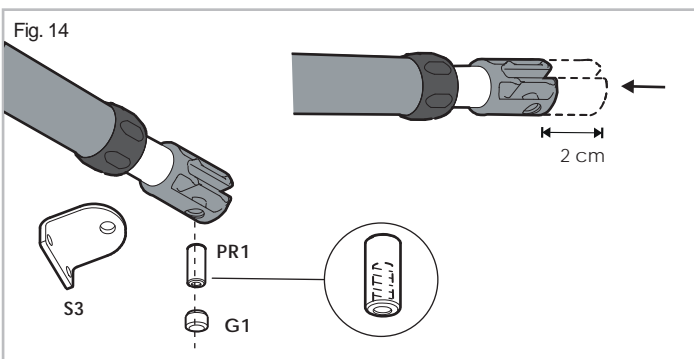


Fig. 14



Check the manual opening of the leaf before definitively fixing the bracket to make sure the gate can open fully to your required angle.

3.6.2 ACE TA

To determine the position of **bracket T2**:

- Put the gate in closing position
- Release the gearmotor
- Slide the front drive pin to the closing limit-switch point (keep a distance of 45 mm between the pin and the pipe end terminal (see picture 15)).
- Fix the **bracket T2** to the drive pin (see picture 16).
- Fit the **bracket T2** onto the gate and keep the motor horizontal. Fix or weld.

ATTENTION: For a proper installation it is advisable to use the first or second hole of T2 bracket.



Check the manual opening of the leaf before definitively fixing the bracket to make sure the gate can open fully to your required angle.

Fig. 15

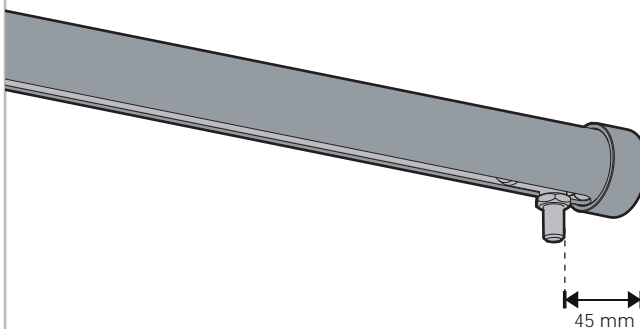


Fig. 16


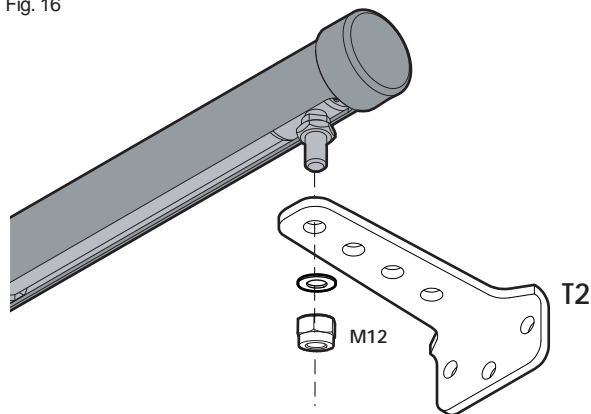


Fig. 17



4. RELEASING THE GEARMOTOR

- Insert the key and turn it 90° clockwise (see picture 17).
- Pull the release handle inwards to unlock the **LH motor** and **outwards** to unlock the **RH motor**.

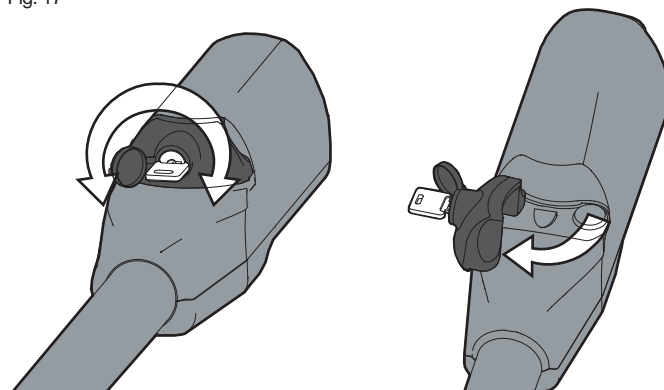

The gate can be locked in any position after the first start command the system will return to its default settings.

5. MAINTENANCE

Functional checks must be performed once every 6 months, including: checking the state of lubrication and tightness of the anchoring screws on the operator as well as the good operation of all safety devices.

6. DISMANTLING AND DISPOSAL



DO NOT DISPOSE OF IN NATURE!

Some components may contain hazardous waste. They must, thus, be removed and turned into licensed firms for their disposal.

Before acting always check the local laws on the matter.

